



## RESCUE PROCEDURE

- 1** Rig the Jason's Cradle – attach the cradle's swivel clips to vessel's fixing points.

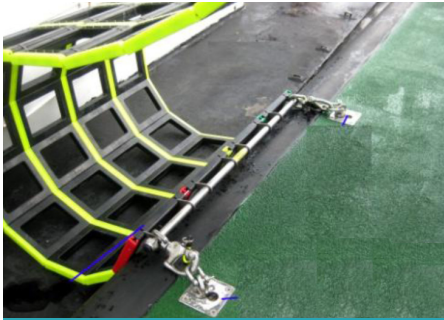



FIG 1

### LEFT HAND RED / RIGHT HAND GREEN

The unit must be deployed as per Fig 1 to create the Jason's Cradle "J" formation. The semi rigid cradle protects the casualty whilst they are lifted to safety.



- 2** Lower the Jason's Cradle into the water and manoeuvre the casualty into the unit with their shoulders at the edge of the apparatus.

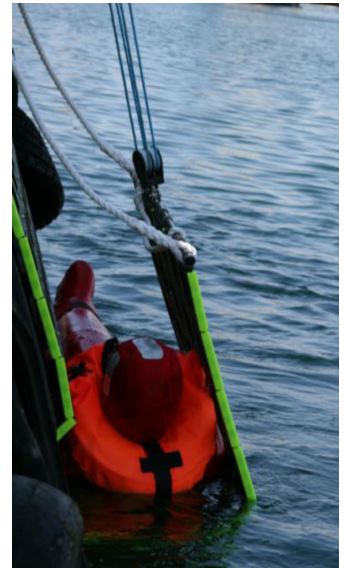

- 3** The unit can now be raised either manually or with a block and tackle. Raise the casualty steadily upwards until they reach the deck or bulwark level.

Now that the casualty is out of danger they can be taken to a position of safety where first aid can be administered.

CALL US ON **+44 (0)1202 874365**  
EMAIL US AT **INFO@JASONSCRADLE.CO.UK**  
OR VISIT **WWW.JASONSCRADLE.CO.UK**

Be equipped for  
**SOLAS III/17-1**

